

ROKU Connectivity Guide

CONFIGURE AUDIO SETTINGS (OPTICAL CONNECTION RECOMMENDED)

1. Go to settings
2. Select Audio
3. Select Audio mode
4. Set to DD, DTS