Nakamichi

SETTING UP YOUR HOME THEATER

SHOCKWAFE ELITE 7.2

1. Surround soundbar system placement

Diagram below is the recommended speaker placement with optimal distance. Actual distance can vary based on actual room layout.

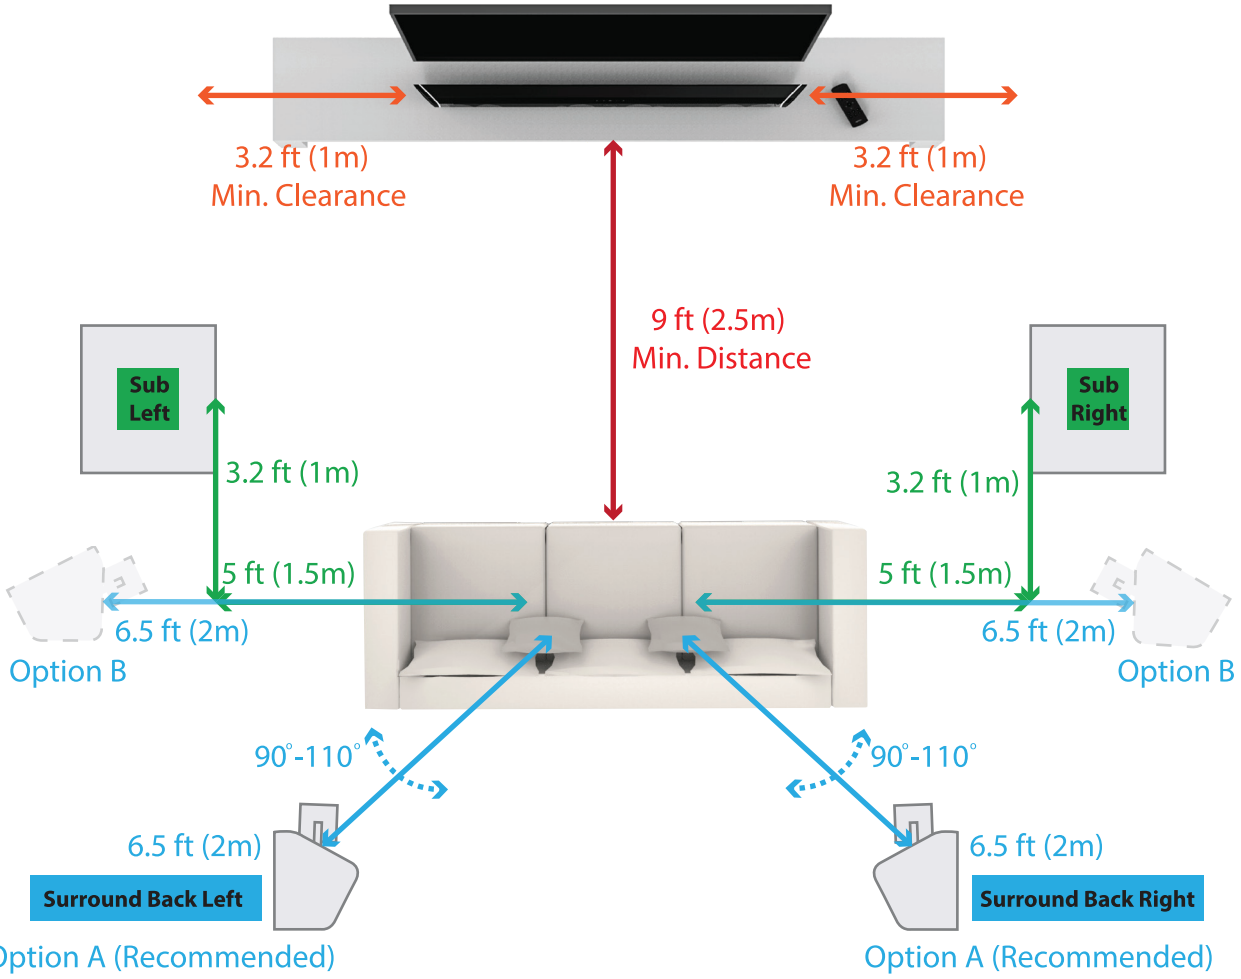

Note:
Illustration is not to scale. Speaker stands are not included.
The drivers of the surround speakers should be at ear level and pointed right at the listener's sitting area.

STOP PLEASE DO NOT RETURN THIS UNIT

Talk to a SHOCKWAFE soundbar specialist

support@nakamichi-usa.com

Web support: www.nakamichi-usa.com/faq

Phone Support: (415) 805 6913
Weekdays 10am - 7pm PST;
Weekends 10am - 5pm PST

2. Connecting with a TV and other devices

Is the HDMI IN jack on your TV labeled ARC?

YES

Connect source devices such as a Blu-ray disc player, cable box, or satellite box to any of the HDMI IN jacks (HDMI 2/3/4) on the soundbar. If source devices are currently connected to a TV, disconnect them from the TV and connect them directly to the Soundbar to get the highest quality surround sound of Dolby Audio, DTS-HD Master Audio and DTS-X.

TV HDMI ARC connection to soundbar.

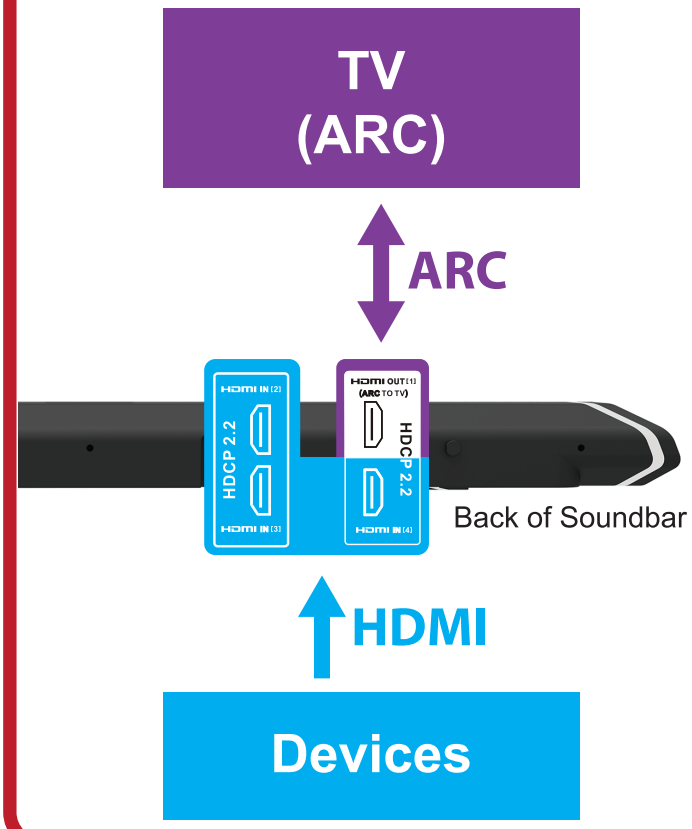

NO

If the TV is not compatible with HDMI ARC, connect the TV's OPTICAL OUTPUT jack to the soundbar's OPTICAL INPUT.

Note :
Make sure that the cables are firmly inserted.

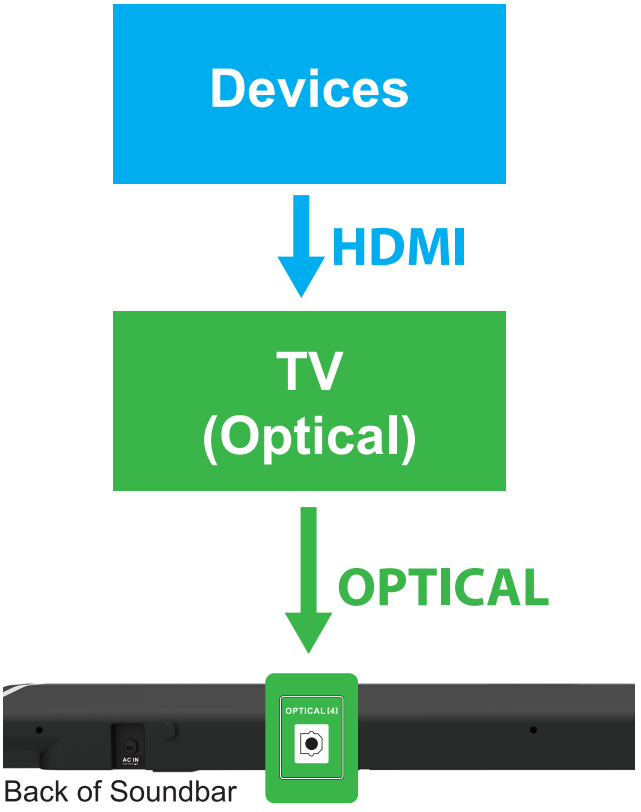

3. Setting up satellite speakers to the subwoofer

LEFT Back Satellite speaker to LEFT Subwoofer.

RIGHT Back Satellite speaker to RIGHT Subwoofer.

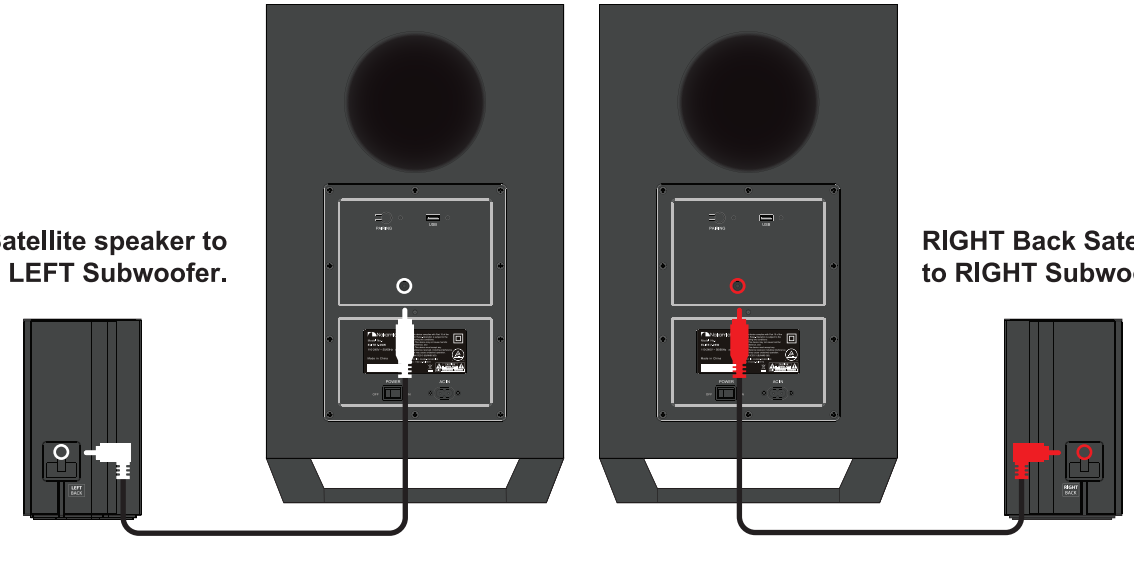

4. Setting up the remote control

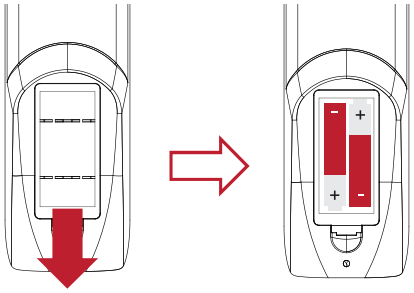

5. Turning on the TV

6. Turning on the Shockwafe Elite 7.2

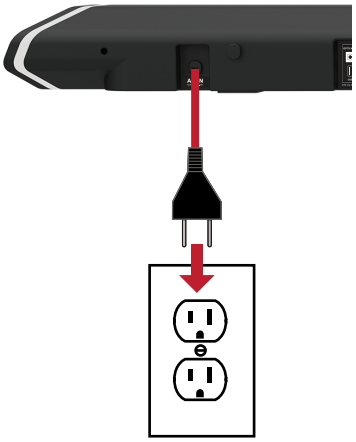

Back of BOTH Subwoofers

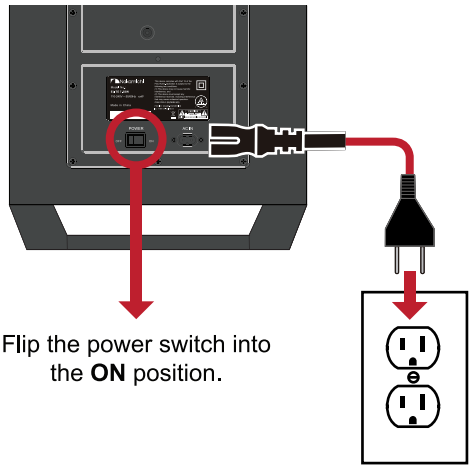

Flip the power switch into the **ON** position.

(1) Connect the AC power cords of the soundbar and wireless subwoofers
(2) Press POWER button on the remote control to turn ON the soundbar
(3) The front panel display lights up
(4) Confirm that the power indicator of the subwoofer is lit in BLUE LED
(5) Turn on the source device

Listening to your soundbar system

To listen to the audio of the TV
Select the desired program using the remote control of the TV.
(1) The screen switches to the television programming and the TV audio is output to the soundbar
(2) If there is no sound, press HDMI ARC on the remote control of the soundbar until “ARC” appears in the front LED Display panel

To enjoy an input device other than the TV
Select the HDMI input or Digital (Optical/Coaxial) input using the soundbar remote control.
(1) The soundbar will change input according to your selection. Input selection will appear in the front LED Display panel

Adjust the volume
(1) Adjust the volume by pressing Vol +/− on the remote control of the soundbar
(2) Adjust the volume of the subwoofer by pressing Bass +/− on the remote control of the soundbar
(3) For details on the EQs adjustment, refer to “Accessing Audio Settings on your Remote” on pg. 29 of the User Manual (separate document).

Note:
When using HDMI 2/3/4 via HDMI ARC to your TV, make sure that the TV’s source is switch to the HDMI ARC.

Setup completed! Enjoy!

Troubleshooting:
For comprehensive troubleshooting guide, visit https://www.helpdesk.nakamichi-usa.com/

1. No TV sound is output from the system, or no picture is displayed on the TV.
• Press HDMI ARC on the remote control of the soundbar until “ARC” appears in the front panel display of the soundbar.
• Make sure that the input and output of the HDMI jacks on the soundbar are plugged in correctly.
• Disconnect the cables that are connected between the TV and the soundbar, then connect them firmly again. Disconnect the AC power cords of the TV and the soundbar from the AC outlets (mains), then connect them again.
• Depending on the order in which you turn on the TV and the soundbar, the soundbar may enter muting mode and “Mute” may appear in the front panel display. In this case, turn on the TV first, then the soundbar.
• When the TV and the soundbar are connected via an HDMI cable, enable the HDMI-CEC control for HDMI function on the TV. For details on the TV’s settings, refer to the operating instructions supplied with the TV. For more information about the soundbar HDMI-CEC control for HDMI function and how to setup, visit helpdesk.nakamichi-usa.com/hdmi-cec
• Check the sound setting of the TV. When the TV is connected to the soundbar, change the audio setting on the TV to external speakers.

2. No picture or sound from the device connected to the system is output.
• Press input source on the remote control of the soundbar until the input connecting the desired device appears on the front panel display of the soundbar.
• Make sure that the input and output of the HDMI jacks on the soundbar are plugged in correctly.
• Disconnect the cables connected to the system, and then connect them again. Make sure that the cables are firmly inserted.

3. No sound or only a very low-level sound is heard from the soundbar.
• Press Vol +/− on the remote control of the soundbar to increase the volume.
• If experiencing any audio cuts or static,check your audio format and make sure that it is set to BITSTREAM not PCM. Refer to www.helpdesk.nakamichi-usa.com/audio-settings

For more detailed troubleshooting guide, refer to “Help & Troubleshooting” on page 38 of the User Manual (separate document).

STOP **PLEASE DO NOT RETURN THIS UNIT**

Talk to a SHOCKWAFE soundbar specialist

support@nakamichi-usa.com

Web support: www.nakamichi-usa.com/faq

Phone Support: (415) 805 6913
Weekdays 10am - 7pm PST;
Weekends 10am - 5pm PST